SAMSUNG

سامسونگ
فقط با ضمانت سام سرویس
www.samservice.com

فر مایکروویو

دستورالعمل مالک و راهنمای آشپزی

MW2350G

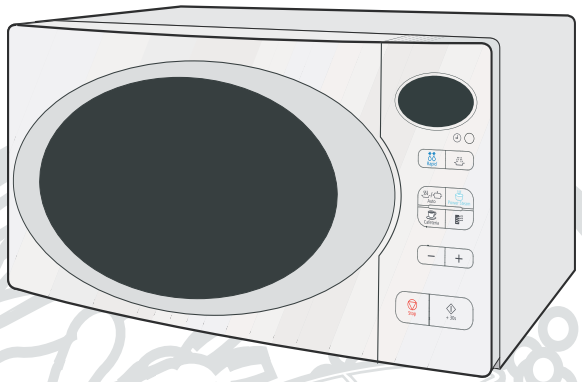

فر ---------- ۲
لوازم جانبی ---------- ۲
صفحه کنترل ---------- ۲
استفاده از این دفترچه راهنما ---------- ۳
نکات ایمنی ---------- ۳
نصب فر مایکروویو ---------- ۴
تنظیم زمان ---------- ۵
در صورتیکه شک دارید یا با مشکل مواجه شده اید چکار باید بکنید ---------- ۵
پختن / گرم کردن مجدد ---------- ۶
میزان توان ---------- ۶
توقف پخت ---------- ۶
تنظیم زمان پخت ---------- ۶
تنظیم زمان انتظار ---------- ۷
استفاده از ویژگی پخت / گرم کردن مجدد خودکار ---------- ۷
تنظیمات گرم کرن مجدد خودکار ---------- ۸
استفاده از ویژگی کافه تریا ---------- ۸
تنظیمات کافه تریا ---------- ۹
استفاده از ویژگی یخ زدایی قدرتی خودکار ---------- ۹
تنظیمات یخ زدایی قدرتی خودکار ---------- ۱۰
استفاده از عملکرد پخت با بخار ---------- ۱۱
خاموش کردن بوق دستگاه ---------- ۱۱
راهنمای لوازم آشپزی ---------- ۱۲
تمیز کردن فر مایکروویو ---------- ۱۳
نگهداری و تعمیر فر مایکروویو ---------- ۱۳
خصوصیات فنی ---------- ۱۴

Planet First 100% Recycled Paper

این دفترچه راهنما از ۱۰۰ درصد کاغذ بازیابی شده تولید شده است.

Code No. : DE68-03605J*- .

فـــر

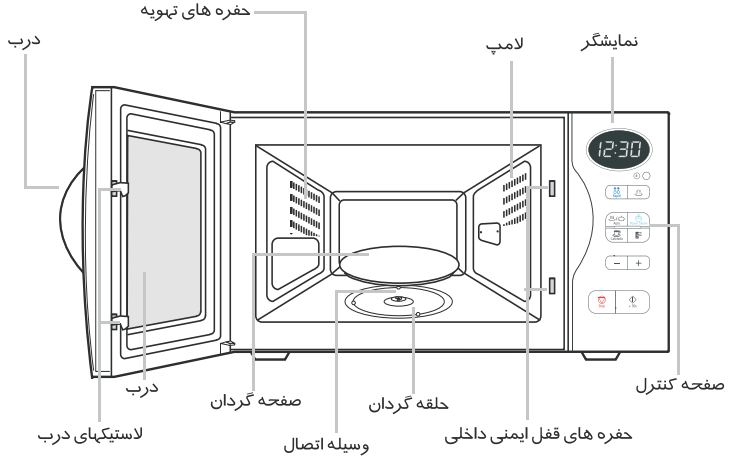

لوازم جانبی

با توجه به مدل دستگاهی که خریده‌اید، لوازم جانبی مختلفی برای آن تهیه و پیش بینی شده است که از آنان در موارد مختلف می‌توانید استفاده نمایید.



۱. وسیله اتصال به روی محور موتور در کف فر قرار می‌گیرد.
کاربرد: وسیله اتصال صفحه گردان را می‌چرخاند.



۲. حلقه گردان، در وسط فر قرار می‌گیرد.
کاربرد: حلقه گردان، صفحه گردان را محافظت می‌نماید.



۳. صفحه گردان، روی حلقه گردان و مرکز آن روی وسیله اتصال سوار می‌شود.
کاربرد: صفحه گردان به عنوان سطح اصلی پخت و پز بکار گرفته شده و هنگام تمیز کردن نیز به راحتی برداشته می‌شود.



۴. بخار پز قدرتی، به صفحه ۱۰ مراجعه کنید.
کاربرد: از بخار پز پلاستیکی به هنگام استفاده از عملکرد پخت با بخار قدرتی استفاده کنید.

از فر ماکروویو بدون حلقه و صفحه گردان استفاده نکنید.

صفحه کنترل

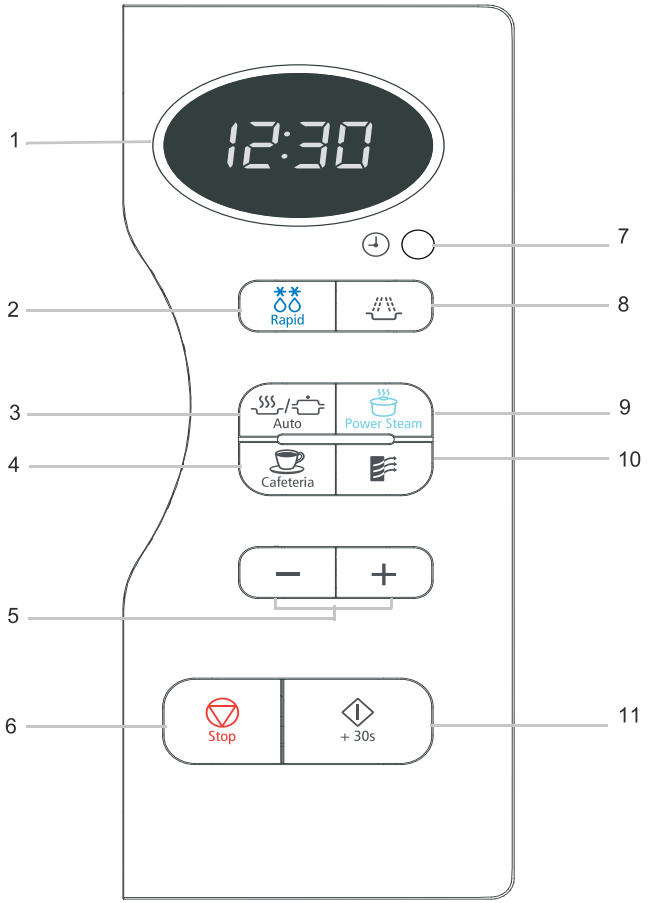

۱. نمایشگر
۲. یخ زدایی سریع
خودکار
۳. انتخاب گرم کردن مجدد/
پخت خودکار
۴. انتخاب کافه تریا
۵. تکمه (+)Up, (-)Down
(وزن، زمان پخت و اندازه سرو)

۶. تکمه STOP/CANCEL
۷. تنظیم زمان
۸. تنظیم سطح توان
۹. تنظیم زمان انتظار
۱۰. تکمه بوزدایی
۱۱. تنظیم Start

استفاده از کتابچه راهنما

هم اکنون شما فر ماکروویو سامسونگ را در اختیار دارید کتابچه راهنمای مالک حاوی اطلاعات بسیار مفیدی در مورد آشپزی با فر ماکروویو می‌باشد:

- ***نکات ایمنی***
- ***لوازم و متعلقات جانبی مناسب***
- ***نکات مفید آشپزی***

در اول این کتابچه راهنما شما تصاویر مرتبط با این فر را مشاهده می‌کنید. و در موارد مهمتر تصاویر صفحه کنترل است که شما با استفاده از آن می‌توانید تکمه ها را سریعتر پیدا کنید.

در روشهای مرحله به مرحله از این دو نشانه استفاده می‌شود.

تذکر

مهم

احتیاط های لازم برای اینکه در معرض انرژی زیاد مایکروویو قرار نگیرید.

اگر نکات ایمنی زیر را به کار نبرید، ممکن است در معرض انرژی زیاد مایکروویو قرار بگیرید:

(a) تحت هیچ شرایطی، فر خوراک پزی نباید با درب باز کار کند یا قفل های ایمنی دستگاه دستکاری شود و همچنین نباید وسیله خارجی را وارد سوراخ های قفل ایمنی نمایید.

(b) هیچ وسیله ای را بین درب و دستگاه قرار ندهید. از تجمع مواد غذایی و یا رسوب مواد پاک کننده بر روی سطوح خودداری کنید. مطمئن شوید که درب و درزگیرهای آن پس از اتمام کار ابتدا با پارچه نمدار و سپس با پارچه خشک کاملاً تمیز شده‌اند.

(c) در صورتیکه دستگاه صدمه دیده است، تا تعمیر آن توسط متخصص با تجربه که توسط تولید کننده آموزش دیده باشد، از استفاده از دستگاه خودداری کنید. بسته شدن راحت و آسان درب دستگاه بسیار مهم می‌باشد و مطمئن شوید که هیچ گونه صدمه ای به آن وارد نشده باشد:
(۱) درب (تا نشده باشد)
(۲) زبانه و لولاهای درب (شکسته و یا شل نباشند)
(۳) سطوح و درزگیرهای درب

(d) فر مایکروویو نباید بوسیله افرادی به غیر از آنانکه توسط تولید کننده آموزش دیده و با تجربه و ماهرمی‌باشند، تنظیم و یا تعمیر شود.

نکات ایمنی

فارسی

راهنمای مهم ایمنی

این نکات را به دقت مطالعه و برای استفاده در آینده به خوبی از آن نگهداری کنید.

قبل از پختن مواد غذایی بوسیله فر مایکروویو، لطفاً موارد زیر را بررسی کنید که کاملاً انجام شده باشد.

- تنها از ظروفی که برای استفاده از فرهای مایکروویو مناسب هستند، استفاده کنید. از ظروف فلزی، ظروف دارای طلا، نقره، سیخ، چنگال و غیره در مایکروویو استفاده نکنید.
  لطفاً سیم های پیچیده شده به بسته بندی پلاستیک یا کاغذی مواد را باز کنید.
  دلیل: ممکن است به دلیل وجود ابزار فلزی جرقه ایجاد شده و فر صدمه ببیند.
- به هنگام گرم کردن غذا در ظروف کاغذی یا پلاستیکی مراقب باشید که جرقه ایجاد نشود.
  از مایکروویو برای خشک کردن کاغذ یا لباس استفاده نکنید.
- میزان کمتر غذاها نیاز به زمان کوتاهتر گرم کردن یا پخت دارند. درصورتیکه زمان معمولی را در نظر بگیرید، ممکن است غذاها بیش از حد گرم شده یا بسوزند.
- در صورتیکه دود مشاهده می کنید دستگاه را خاموش کرده یا از پریز بکشید و درب ها را بسته نگه دارید تا هر گونه شعله ای از بین رود.
- گرم کردن نوشیدنی ها ممکن است به جوشیدن و سر ریز منجر شود، بنابراین باید به هنگام لمس ظرف مراقب باشید.
  برای جلوگیری از این موقعیت:
  همیشه ۲۰ثانیه بعد از خاموش شدن فر منتظر بمانید تا دما متعادل شود.
  در صورت لزوم نوشیدنی را در حین گرم شدن و همیشه آن را بعد از گرم شدن هم بزنید.
  در صورت وقوع سوختگی، کمک های اولیه زیر را اجرا کنید:
  * محل سوختگی را به مدت حداقل ۱۰دقیقه درون آب سرد قرار دهید.
  * آن را با یک پارچه خشک و تمیز ببندید.
  * از هیچ گونه کرم، روغن یا لوسیون استفاده نکنید.
- **هرگز** ظرف را تا انتها پر نکنید و از ظروفی که بالای آن ها عریض تر از پایین آن هاست، استفاده نمایید تا از جوشیدن و لبریز شدن مایع جلوگیری کنید. بطری های دارای دهانه باریک ممکن است در صورت گرم شدن بیش از حد منفجر شوند.
- **هرگز** بطری شیر کودک را با پستانک روی آن گرم نکنید چون ممکن است در صورت گرم شدن بیش از حد بطری بترکد.
- محتوای بطری های غذا و شیشه های کودک باید هم زده یا تکان داده شوند و دمای آن ها قبل از مصرف به منظور جلوگیری از سوختگی، کنترل شوند.
- تخم مرغ ها نباید در فر مایکروویو گرم شوند چون ممکن است حتی بعد از پایان یافتن حرارت مایکروویو بترکند.

  همچنین بطری ها، ظروف، آجیل های درون بسته بندی و سیب زمینی های وکیوم شده و پرس شده را در مایکروویو گرم نکنید.
- فر باید به طور مرتب تمیز شده و هر گونه غذای باقی مانده خارج شود.
- عدم نگه داری فر در یک محیط پاکیزه ممکن است منجر به خراب شدن سطح فر شده که این امر می‌تواند تاثیری معکوس بر عمر دستگاه داشته و به موقعیتی خطرناک منجر شود.
- هرگز حفره های تهویه را با کاغذ یا پارچه نپوشانید. ممکن است این امر منجر به آتش سوزی به هنگام خروج هوای داغ از فر شود.
  فر ممکن است به هنگام داغ شدن بیش از حد به طور خودکار خاموش شود. دستگاه تا زمانی که به طور کافی خنک شود، غیر فعال باقی می‌ماند.
- **همیشه** به هنگام خارج کردن ظرف از فر مراقب باشید که دستتان نسوزد.

احتیاط های ایمنی(ادامه)

- المنت حرارتی یا دیواره های فر را تا زمانی که فر خنک نشده است، لمس نکنید.
- سیم برق یا دوشاخه را در آب قرار ندهید و کابل برق را از سطوح داغ دور نگه دارید.

هنگامیکه سیم یا دوشاخه آسیب دیده است، از این دستگاه استفاده نکنید.

- به هنگام باز کردن درب فر به‌اندازه یک بازو از آن فاصله بگیرید.

دلیل: هوا یا بخار داغ ممکن است منجر به سوختگی شود.

- ممکن است به هنگام عملکرد دستگاه(به خصوص به هنگام یخ زدائی) صدای کلیک به گوش برسد.

دلیل: این صدا به هنگام تغییر خروجی توان الکتریکی عادی می‌باشد.

- هرگز از فر ماکروویو به هنگام خالی بودن آن استفاده نکنید. برق به دلیل مسائل ایمنی به طور خودکار قطع می‌شود. شما می‌توانید بعد از ثابت ماندن آن به مدت ۳۰ دقیقه از آن استفاده کنید.

توصیه می‌شود که همیشه یک لیوان آب درون فر ماکروویو قرار دهید. چون در صورتیکه فر به طور تصادفی شروع به کار کند، آب انرژی ماکروویو را جذب می‌کند.

- فر ماکروویو را در کابینت نگه داری نکنید.

نکات مهم

- هرگز نباید به کودکان اجازه استفاده یا بازی کردن با فر ماکروویو بدهید.

هرگز به هنگام کار کردن ماکروویو کودکان را در نزدیکی فر و بدون توجه رها نکنید.

اقلام مورد علاقه کودکان نباید در بالای فر ماکروویو نگه داری یا گذاشته شود.

- این دستگاه نباید توسط افرادی که از لحاظ جسمی، حسی یا ذهنی دچار کمبود هستند یا دارای تجربه و دانش کمی در مورد استفاده از دستگاه می‌باشند، مورد استفاده قرار بگیرد مگر اینکه توسط شخصی مسئول و آگاه نظارت شده یا دستورالعمل ها را به منظور رعایت نکاتی ایمنی دریافت کرده باشند.
- کودکان باید نظارت شوند تا اطمینان حاصل شود که با دستگاه بازی نمی‌کنند.

هشدار

در صورت آسیب دیدن درب یا پلاستیک های آن، تا زمانیکه توسط شخص ماهر تعویض یا تعمیر نشده، نباید از فر استفاده کنید.

هشدار

انجام هر گونه سرویس یا تعمیر توسط افرادی به غیر از اشخاصی که دارای صلاحیت و مجوز می‌باشند، از قبیل برداشتن پوشش دستگاه که انرژی مایکروویو پخش می‌کند، خطرناک می‌باشد.

هشدار

از گرم کردن مواد غذایی یا مایعاتی که در ظروف در بسته هستند، خودداری کنید. زیرا امکان ترکیدن آن ها وجود دارد.

هشدار

پس از آموزش کافی در زمینه استفاده از دستگاه به آن ها اجازه استفاده از دستگاه را بدهید. مطمئن شوید که کودکان نکات ایمنی و خطرات عدم استفاده از دستگاه را یاد گرفته باشند.

نصب مایکروویو

فر را در یک محل صاف و پایدار که ۸۵ سانتیمتر از کف فاصله دارد، قرار دهید.

سطح باید به‌اندازه کافی تحمل وزن فر را داشته باشد.

۱. وقتی دستگاه را نصب می‌کنید مطمئن شوید که فضای تهویه کافی برای فر به صورت حداقل ۱۰ سانتیمتر از پشت ۲۰ سانتیمتر از دو طرف و بالا و ۸۵ سانتیمتر از کف فاصله داشته باشد.

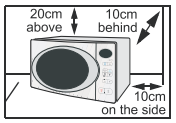

۲. کلیه وسایل بسته بندی را از داخل دستگاه بیرون بیاورید.
حلقه گردان و صفحه گردان را نصب کنید.
صفحه گردان را آزمایش کنید که به راحتی بچرخد.



۳. به گونه ای دستگاه را نصب کنید که به پریز برق دسترسی داشته باشید.

در صورت آسیب دیدن سیم، باید آن را با سیم مخصوص یا با سیم های موجود در کارخانه یا نمایندگی خدمات تعویض کنید.

برای ایمنی خودتان، کابل را به پریز ۳ شاخه ۲۳۰ ولت، ۵۰ هرتزی AC دارای سیم اتصال به زمین، وصل کنید. اگر کابل این وسیله صدمه دیده باشد، باید توسط تولید کننده و یا نمایندگی مجاز و یا اشخاص معتبر تعویض گردد.

دستگاه را در نقاط گرم و مرطوب و در نزدیکی رادیاتور و یا اجاق معمولی نصب نکنید.

برق مورد نیاز دستگاه را باید به دقت بررسی نمایید. اگر به سیم اضافی نیاز دارید،

حتماً از سیم مشابه سیم اصلی دستگاه استفاده نمایید. نوار درزگیر درب و قسمت های داخلی دستگاه را قبل از اولین استفاده با پارچه نمدار تمیز نمایید.

تنظیم ساعت

فر مایکروویو شما دارای ساعت می‌باشد. زمان آن را می‌توانید به صورت ۱۲ساعتی یا ۲۴ ساعتی نمایش دهید. شما باید ساعت را در مواقع زیر دوباره تنظیم کنید:

- ***وقتی برای اولین بار دستگاه را نصب نموده‌اید.***
- ***پس از قطع برق***

✉ فراموش نکنید که پس از تغییر ساعات تابستانی به زمستانی، مجددا ساعت را تنظیم کنید.



۱. برای نشان دادن زمان در شرایط زیر ... تکمه (🕘) را فشار دهید ...

علائم ۲۴ساعتی	یک بار
علائم ۱۲ساعتی	دو بار

۲. تکمه های (+)و(-) را برای تنظیم ساعت فشار دهید.



۳. تکمه (🕘) را فشار دهید.

۴. تکمه های (+)و(-) را برای تنظیم دقیقه فشار دهید.



۵. تکمه (🕘) را فشار دهید.

اگر مطمئن نیستید و یا با مشکل روبرو شده‌اید چه کار باید بکنید.

فارسی

در صورت مواجه شدن با هر یک از مشکلات زیر، راه حل های زیر را امتحان نمایید.

◆ اشکالات زیر، مواردی عادی است.
- تشکیل قطرات آب داخل دستگاه
- جریان هوا در اطراف درب و قاب بیرونی
- انعکاس نور در اطراف درب و قاب بیرونی
- خروج بخار از اطراف درب و هواکش ها

◆ با فشار دادن تکمه دستگاه کار نمی‌کند.
- آیا درب کاملاً بسته است؟

◆ غذا اصلاً پخته نشده است.
- آیا زمان را درست تنظیم کرده‌اید و یا تکمه را فشار داده‌اید؟
- آیا درب بسته است ؟
- آیا با قرار دادن دوشاخه های متعدد به یک پریز باعث اعمال بار الکتریکی زیاد به مدار برق نشده‌اید، آیا فیوز و یا پلاتین مدار برق فعال نشده است؟

◆ غذا بیش از حد پخته و یا خام است.
- آیا زمان مناسب با نوع غذا تنظیم شده است؟
- آیا از توان مناسب دستگاه استفاده شده است؟

◆ قوس الکتریکی و جرقه داخل دستگاه ایجاد می‌شود.
- آیا از سینی با نوار فلزی استفاده کرده‌اید؟
- آیا چنگال و یا لوازم فلزی مشابهی در داخل دستگاه جا گذاشته اید؟
- آیا فویل آلومینیومی‌نزدیک دستگاه است؟

◆ فر به هنگام کار موجب تداخل امواج رادیوئی یا تلویزیونی می‌شود.
- تداخل امواج بسیار ضعیف در رادیو و تلویزیون به هنگام کار دستگاه، عادی است.
  برای حل این مشکل دستگاه را دور از رادیو، تلویزیون و کابل آنتن تلویزیون قرار دهید.
- اگر وسیله ریز پردازنده امواج را شناسائی کند، صفحه نمایش باید مجدداً تنظیم شود.
  برای حل این مشکل کابل برق را از پریز جدا کرده و مجدداً وصل نمائید. زمان را مجدداً تنظیم کنید.

✉ اگر راهنمائی های فوق مشکل شما را برطرف نکرد، از فروشنده و یامراکز خدمات پس از فروش سامسونگ کمک بگیرید.

فارسی

پختن غذا/ گرم کردن مجدد

روش های زیر چگونگی پختن غذا و یا گرم کردن مجدد را تشریح می‌نماید.
همیشه قبل از رها کردن فر، تنظیمات پخت را بررسی کنید.

در مرحله اول، غذا را در وسط صفحه گردان قرار دهید. سپس در مرحله بعد درب را ببندید.



۱. تکمه را فشار دهید.
نتیجه: نشانه ۸۵۰ W (حداکثر توان آشپزی) نمایش داده می‌شود.
با فشار تکمه توان مورد نظر را انتخاب کرده و آن را برروی صفحه نمایش ببینید.
به جدول توان در صفحه بعد مراجعه نمائید.

۲. زمان آشپزی را با فشار دادن تکمه (+)و(-) تنظیم نمایید.



۳. تکمه را فشار دهید.
نتیجه: چراغ فر روشن شده و صفحه گردان شروع به چرخیدن می کند.
آشپزی شروع شده و پس از اتمام کار فر چهار بار بوق می‌زند.

هرگز فر مایکروویو را زمانیکه خالی است روشن نکنید.

اگر می‌خواهید غذا را برای مدت کوتاه با حداکثر توان (۸۵۰وات) گرم کنید، می‌توانید فقط با فشردن تکمه 30s+ که با هر بار فشار تکمه زمان پخت را ۳۰ثانیه تغییر می‌دهید، این کار را انجام دهید. دستگاه بلافاصله شروع به کار خواهد کرد.

میزان توان

شما می‌توانید توانهای زیر را انتخاب نمائید.

میزان توان	خروجی
زیاد	۸۵۰وات
متوسط زیاد	۶۰۰ وات
متوسط	۴۵۰ وات
متوسط کم	۳۰۰ وات
یخ زدایی	۱۸۰ وات
کم/گرم نگه داشتن	۱۰۰ وات

اگر از زیادترین توان استفاده کنید، زمان آشپزی کاهش می‌یابد و
اگر از کمترین توان استفاده کنید، زمان آشپزی افزایش می‌یابد.

توقف پخت غذا

برای بررسی غذا، می‌توانید آشپزی را متوقف نمائید.



۱. برای توقف موقت،
درب را باز کنید.
نتیجه: آشپزی متوقف می‌شود. برای ادامه آشپزی درب را بسته و تکمه را مجدداً فشار دهید.



۲. برای توقف کامل:
تکمه Stop را فشا ردهید.
نتیجه: آشپزی متوقف می‌شود. اگر می‌خواهید تنظیمات آشپزی را لغو نمائید تکمه Stop را مجدداً فشار دهید.

قبل از شروع آشپزی می‌توانید با فشار دادن تکمه تنظیمات را لغو نمائید.

تنظیم زمان پخت

شما می‌توانید برای اضافه کردن هر ۳۰ثانیه به زمان پخت تکمه 30s+ را یکبار فشار دهید.



برای کاهش یا افزایش زمان آشپزی تکمه را یکبار یا بیشتر فشار دهید.

استفاده از ویژگی آشپزی/ گرم کردن مجدد خودکار

ویژگی آشپزی /گرم کردن مجدد خودکار دارای چهار برنامه از پیش تنظیم شده است. شما با استفاده از این برنامه ها نیاز به تنظیم زمان و توان آشپزی نخواهید داشت.
با فشار دادن تکمه های UP/Down مقدار غذای مورد نیاز خود را مشخص نمائید.
در مرحله اول غذا را در وسط صفحه گردان قرار داده و سپس درب دستگاه را ببندید.



۱. با فشار یک یا چند باره تکمه **Auto Reheat/Cook** (/) نوع غذای مورد نظر را انتخاب نمایید.



۲. اندازه غذا را با فشار دادن تکمه (+),(-)تعیین نمایید.
(به جدول صفحه بعد مراجعه نمایید)



۳. تکمه را ⏀ را فشاردهید.

نتیجه:
پخت غذا شروع می‌شود. پس از اتمام کار:
۱) فر چهار بار بوق می‌زند.
۲) سیگنال نشان دهنده تمام شدن کار دستگاه، سه بار بوق می‌زند(هر دقیقه یکبار)
۳) ساعت نمایش داده می‌شود.

✉ از دستورات آشپزی مخصوص مایکروویو استفاده نمائید.

تنظیمات گرم کردن مجدد/آشپزی خودکار

جدول زیر برنامه های مختلف مربوط به مقدار غذا، زمان‌های انتظار و توصیه های لازم در گرم کردن / آشپزی خودکار را ارائه می دهد.

کد / غذا	مقدار غذا	زمان انتظار	توصیه ها
۱. **غذای آماده (خنک)**	۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم	۳ دقیقه	غذا را روی بشقاب سرامیکی قرار داده و توسط سلفون مخصوص مایکروویو آن را بپوشانید. این برنامه غذایی مخصوص غذاهایی است که از ۳گروه غذایی تشکیل شده‌اند. (مانند گوشت با سس، سبزیجات و غذاهای جانبی مانند سیب زمینی، برنج و ماکارونی)
۲. **غذای آماده منجمد**	۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم	۴ دقیقه	غذای آماده منجمد را برداشته و بررسی کنید که ظرف آن مناسب مایکروویو باشد. فیلمهای روی غذا را سوراخ کنید. غذای آماده منجمد را در مرکز قرار دهید. این برنامه برای غذاهای حاضری منجمد که از سه گروه غذایی تشکیل شده است، است (مانند گوشت با سس و سبزیجات و و غذاهای جانبی مانند سیب زمینی، برنج یا ماکارونی.)
۳. **سیب زمینی Jacket**	۲۰۰ گرم ۴۰۰ گرم ۶۰۰ گرم	۳دقیقه	سیب زمینی های دارای اندازه مساوی را برداشته و وزن کنید که هر کدام در حدود ۲۰۰گرم وزن داشته باشند. آن ها را شسته و با چنگال سوراخ کنید. هر سیب زمینی را داخل یک سلفون پوشش مایکروویو بچینید. یک سیب زمینی را در مرکز گذاشته و دو سیب زمینی دیگر را مقابل یکدیگر قرار دهید و ۳سیب زمینی را به طور دایره ای بر روی صفحه گردان قرار دهید.
۴. **سبزیجات تازه**	۱۵۰-۱۰۰ گرم ۲۵۰-۲۰۰ گرم ۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم ۵۵۰-۵۰۰ گرم	۳دقیقه	سبزی ها را بعد از شستن وزن کنید و آن ها را به‌اندازه های مساوی ببرید. سپس آن ها در یک ظرف شیشه ای با درپوش بریزید. ۳۰میلی لیتر آب (۲قاشق چایخوری) برای پخت ۲۵۰-۱۰۰ گرم و ۴۵ میلی لیتر (۴-۳ قاشق چایخوری) برای پخت g ۵۵۰-۳۰۰ اضافه کنید. بعد از پخت آن را هم بزنید.
۵. **سبزیجات منجمد**	۱۵۰-۱۰۰ گرم ۲۵۰-۲۰۰ گرم ۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم ۵۵۰-۵۰۰ گرم	۴-۳ دقیقه	سبزی های منجمد را وزن کنید (18 c-) و آن ها را در یک ظرف پیرکس شیشه ای با درپوش بریزید. به هنگام پختن ۳۵۰-۱۰۰گرم ۱۵میلی لیتر (۱قاشق چایخوری) و برای ۵۵۰-۴۰۰ گرم، ۳۰میلی لیتر آب (۳قاشق چایخوری) اضافه کنید. بعد از پختن و قبل از سرو آن هم بزنید. این برنامه برای حبوبات، ذرت شیرین، کلم، گل کلم و سبزیجات مخلوط مثل نخودفرنگی، هویج و گل کلم مناسب می‌باشد.

فارسی

استفاده از ویژگی کافه تریا

با ویژگی کافه تریا زمان پخت به طور خودکار تنظیم می شود.

شما می توانید تعداد زمان های سرو را با فشار دادن تکمه (+),(−) تنظیم کنید.

ابتدا غذا را در صفحه گردان قرار داده و درب را ببندید.

۱. نوع غذایی که می خواهید بپزید با فشار دادن تکمه **Cafeteria**(☕) انتخاب کنید.

۲. اندازه سرو غذا را با فشار دادن تکمه (+),(-) انتخاب کنید. (به جدول روبرو مراجعه کنید)



۳. تکمه ⏀ را فشار دهید.

نتیجه: پختن آغاز می شود. هنگامیکه پخت تمام شد:
۱) فر چهار بار بوق می زند.
۲) سیگنال یادآوری ۳ بار بوق می زند.
(هر دقیقه یکبار)
۳) زمان کنونی دوبار نمایان می شود.

✉ تنها از ظروفی استفاده کنید که مخصوص مایکروویو هستند.

تنظیمات کافه تریا

جدول زیر برنامه های خودکار را برای گرم کردن مجدد مایعات و یخ زدایی و گرم کردن کیک منجمد ارائه می‌دهد.

این جدول شامل مقدار غذا، زمان انتظار و توصیه های مربوطه می‌باشد.

کد / غذا	اندازه سرو	زمان انتظار	توصیه ها
۱. ☕ **نوشیدنی ها** قهوه، شیر، چای، آب (دمای اتاق)	**۱۵۰ میلیلیتر** (۱ فنجان) **۲۵۰ میلیلیتر** (۱ لیوان)	۲-۱ دقیقه	مایع را درون فنجان 150ml یا لیوان 250ml ریخته و آن را بدون درپوش در فر بگذارید. یک فنجان را در مرکز و دو فنجان را در مقابل یکدیگر و ۳ و ۴ فنجان را به صورت دورانی در فر بگذارید. نوشیدنی را قبل و بعد از زمان انتظار هم بزنید. به هنگام خارج کردن فنجان ها مراقب باشد (دستورالعمل مربوط به گرم کردن مایعات را به دقت بخوانید)
۲. 🍰 **کیک منجمد**	**۱۰۰** گرم (۱ قطعه) **۲۰۰** گرم (۲ قطعه) **۳۰۰** گرم (۳-۲ قطعه) **۴۰۰** گرم (۴-۳ قطعه) **۵۰۰** گرم (۴ قطعه)	۱۵-۵ دقیقه	تکه های کیک را به صورت دایره ای بر روی پایه فلزی قرار دهید. قطعه بزرگتر را بر روی صفحه گردان قرار دهید. یک قطعه را در مرکز و ۲ قطعه دیگر را در مقابل یکدیگر و ۳ تا ۴ قطعه کیک را به صورت دایره ای بر روی صفحه گردان بچینید. با استفاده از گرم کننده کیک گرم شده و برشته می‌شود. این برنامه برای کیک های سیب با روکش میوه خرد شده کیک اشترودل ، کیک با دانه های ذرت و کلوچه مناسب می باشد. این برنامه برای کیک های کرم دار یا دارای روکش شکلات مناسب نیست.

استفاده از ویژگی یخ زدائی قدرتی خودکار

ویژگی فوق شما را قادر می‌سازد که یخ کلیه مواد غذائی از قبیل گوشت، جوجه، ماهی، نان و کیک را آب کنید. زمان و توان مورد نیاز برای این کار به طور خودکار تنظیم می‌گردد.

✉ از ظروفی که در برابر امواج مایکروویو ایمن هستند، استفاده نمائید.

مواد غذایی منجمد شده را بر روی ظروف سرامیکی در وسط صفحه گردان قرار دهید و درب دستگاه را ببندید.



۱. با فشار یک یا چند بار تکمه **Rapid** (❄❄) نوع غذای مورد نظر خود را انتخاب کنید.
(برای جزئیات بیشتر به جدول صفحه بعد مراجعه نمائید)

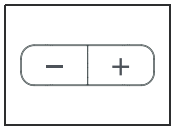

۲. با فشار دادن تکمه (+)،(-) وزن غذا را انتخاب نمائید. تنظیم تا حداکثر ۲۰۰۰گرم امکان پذیر است.



۳. تکمه ⏀ را فشار دهید.

نتیجه:
پخت شروع می‌شود. بعد از پایان پخت
۱)عمل یخ زدائی شروع می‌شود.
۲)دستگاه در زمان یخ زدائی بوق می‌زند تا برگردان غذا را به شما یادآوری کند.
۳)تکمه **Start** را مجدداً فشار دهید تا عمل یخ زدائی تمام شود.

✉ شما به طور دستی هم می‌توانید یخ مواد غذایی را از بین ببرید. برای این کار توان دستگاه مایکروویو را روی ۱۸۰ وات تنظیم کنید. برای توضیحات بیشتر به بخش «پختن گرم کردن مجدد» در صفحه ۶ مراجعه نمائید.

تنظیمات یخ زدائی قدرتی خودکار

جدول زیر برنامه ها، مقادیر زمان انتظار و توصیه های لازم را در مورد عملکرد یخ زدایی خودکار ارائه می‌دهد.

هر نوع پوشش یا بسته بندی مواد را قبل از عمل یخ زدائی بردارید. گوشت، ماهی، مرغ و کیک /نان را روی بشقاب سرامیکی قرار دهید.

کد / غذا	مقدار غذا	زمان انتظار	توصیه ها
۱. **گوشت**	۲۰۰۰-۲۰۰ گرم	۶۰-۲۰ دقیقه	دور تا دور گوشت را با فویل آلومینیومی‌بپوشانید. در زمان بوق زدن فر، گوشت را برگردانید. این برنامه برای گوشت گاو، بره، خوک و استیک، گوشت چرخ کرده و تکه ای مناسب می‌باشد.
۲. **مرغ**	۲۰۰۰-۲۰۰ گرم	۶۰-۲۰ دقیقه	پا و بال مرغ را با فویل آلومینیومی‌بپوشانید. در زمان بوق زدن فر، مرغ را برگردانید. این برنامه برای مرغ کامل و تکه های جوجه مناسب می‌باشد.
۳. **ماهی**	۲۰۰۰-۲۰۰ گرم	۵۰-۲۰ دقیقه	دم ماهی را با فویل آلومینیومی‌بپوشانید. در زمان بوق زدن فر، ماهی را برگردانید. این برنامه برای ماهی کامل و تکه های ماهی مناسب می‌باشد.
۴. **نان/کیک**	۱۰۰۰-۱۰۰ گرم	۲۰-۵ دقیقه	نان را بر روی کاغذ آشپزی قرار داده و در هنگام شنیدن بوق، آن ها را برگردانید. کیک را بر روی بشقاب سرامیکی قرار داده و در صورت امکان و به هنگام شنیدن بوق آن را برگردانید.(فر به کار کردن ادامه داده مگر آن که درب دستگاه باز شود.) این برنامه برای انواع نان کامل و حلقوی و باگت مناسب می‌باشد. نان ها را به صورت دایره بچینید. این برنامه برای انواع مختلف کیک های مخمری، بیسکویت، کیک پنیری و شیرینی های خشک مناسب می باشد. این برنامه برای کلوچه های ضخیم کیک های کرم دار و میوه ای و کیک های دارای روکش شکلاتی مناسب نمی‌باشد.

استفاده از عملکرد بخار پز قدرتی

با استفاده از ویژگی بخار پز قدرتی، زمان پخت به طور خودکار تنظیم می‌شود.
شما می‌توانید مقدار سرو را با فشار دادن تکمه‌های (+)و(−) تنظیم کنید.



۱. نوع غذایی را که می خواهید بپزید با فشار دادن تکمه Power Stram ( )فشار دهید.

۲. اندازه سرو را با فشار دادن تکمه‌های (+)و(−) را فشار دهید.

(به جدول صفحه مقابل مراجعه کنید.)



۳. تکمه ◁ را فشار دهید.

نتیجه: پخت شروع می‌شود. بعد از پایان پخت
۱) فر ۴ بار بوق می‌زند .
۲) سیگنال پایان پخت ۳ بار بوق می زند (هر دقیقه یکبار)
۳) زمان کنونی دوباره ظاهر می‌شود.

تنها از ظروفی که مخصوص مایکروویو هستند، استفاده کنید.

اجزای بخار پز قدرتی


درپوش

سینی داخل آن

ظرف

استفاده از بخار پز قدرتی

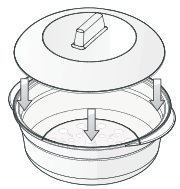

+

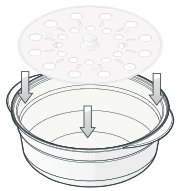

(ظرف با سینی داخل آن +درپوش)

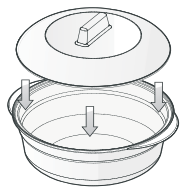

(ظرف+درپوش)

جدول زیر ۴ برنامه خودکار برای عملکرد بخار پز قدرتی، مقدارها، زمان‌های انتظار و توصیه‌های مربوطه را ارائه می‌دهد.
به هنگام استفاده از عملکرد بخار پز از ظرف بخار پز استفاده کنید.

کد / غذا	مقدار غذا	زمان انتظار	ظرف	توصیه ها
۱. برنج سفید	۲۰۰-۱۵۰ گرم ۳۰۰-۲۵۰ گرم	۵-۴دقیقه	ظرف + درپوش	از برنج نیمه جوشیده استفاده کنید. برنج را داخل ظرف بخار پز بریزید. دو برابر آب اضافه کنید. درپوش را بگذارید. بعد از ریخته شدن و قبل از زمان انتظار آن را هم بزنید.
۲. سیب زمینی پوست کنده	۱۵۰-۱۰۰ گرم ۲۵۰-۲۰۰ گرم ۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم ۵۵۰-۵۰۰ گرم	۳-۲دقیقه	ظرف + درپوش	سیب زمینی‌ها را بعد از پوست کندن و شستن وزن کرده و به‌اندازه‌ها مساوی برش بزنید. آن ها را داخل ظرف بشقاب بخار پز بریزید ۳۰-۱۵ میلی لیتر(۲ قاشق سوپخوری) آب برای ۳۵۰-۱۰۰ گرم و ۶۰-۴۵ میلی لیتر(۴-۳ قاشق سوپ خوری) برای ۵۵۰-۴۰۰ گرم سیب زمینی اضافه کنید.
۳. سبزیجات تازه	۱۵۰-۱۰۰ گرم ۲۵۰-۲۰۰ گرم ۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم	۲-۱دقیقه	ظرف + سینی داخل آن+ درپوش	سبزیجات را بعد از شستن و تمیز کردن وزن کرده و به‌اندازه‌های مساوی برش بزنید. سینی را داخل ظرف بخار پز بگذارید و سبزیجات را داخل آن بریزید. ۳۰ میلی لیتر آب (۲ قاشق سوپ خوری) برای ۳۵۰-۱۰۰ گرم و ۴۵ میلی لیتر آب (۳ قاشق سوپ خوری) برای ۴۵۰-۴۰۰ گرم اضافه کنید. درپوش را بگذارید.
۴. کمپوت میوه	۱۵۰-۱۰۰ گرم ۲۵۰-۲۰۰ گرم ۳۵۰-۳۰۰ گرم ۴۵۰-۴۰۰ گرم	۳-۲دقیقه	ظرف + درپوش	میوه‌های تازه را بعد از پوست کندن و شستن وزن کرده و به قطعات مساوی برش بزنید. آن ها را داخل بشقاب بخار پز بریزید. به هنگام بخار پز کردن ۳۵۰-۱۰۰ گرم میوه، ۳۰-۱۵ میلی لیتر(۲-۱ قاشق سوپ خوری)و برای ۴۵۰-۴۰۰ گرم، ۴۵ میلی لیتر، (۲-۱ قاشق سوپ خوری) آب اضافه کنید. ۲-۱ قاشق سوپ خوری شکر اضافه کنید درپوش را بگذارید. بعد از بخار پز کردن با دقت آن‌ها را هم بزنید این برنامه برای پختن سیب، هلو، ، یا آناناس مناسب می‌باشد.

استفاده از ویژگی بو زدایی

از این ویژگی بعد از پخت غذاهای بودار یا هنگامی‌که داخل فر پر از دود است، استفاده کنید.

ابتدا داخل فر را تمیز کنید.

بعد از تمام شدن عملکرد تمیز کردن تکمه Deodorize ( ) را فشار دهید.
فر چهار بار بوق می زند.

- زمان بو زدایی ۵دقیقه تعیین شده است. هر زمان که تکمه 30s+ فشار داده می‌شود، زمان بو زدایی ۳۰ثانیه اضافه می‌شود.
- حداکثر زمان بوزدایی ۱۵دقیقه است.

خاموش کردن بوق دستگاه

شما می توانید هر زمان که می خواهید، بوق دستگاه را خاموش کنید.



۱. تکمه های Stop و Start را همزمان فشار دهید.

نتیجه: با هر بار فشار دادن تکمه، بوق دستگاه قطع می‌شود.

هربار که این تکمه را فشار می دهید، فر بوق نخواهد زد.



۲. برای استفاده مجدد از بوق دستگاه، تکمه های Stop و Start را مجدداً فشار دهید.

نتیجه: صدای بوق دستگاه دوباره شنیده می شود.

هربار که این تکمه را فشار می دهید، فر بوق می زند.

راهنمای لوازم آشپزی

برای پخت غذا در مایکروویو، امواج مایکروویو باید بدون آن که منعکس و یا بوسیله سینی جذب شوند، به داخل غذا نفوذ نمایند.

بنابراین باید هنگام انتخاب لوازم آشپزی مایکروویو دقت لازم را به کار ببرید.
اگر لوازم آشپزی شما دارای علامت *Microwave-safe* ***می‌باشد، دیگر نگران آشپزی خود نباشید.***

جدول زیر لوازم آشپزی و چگونگی کاربرد آنان را تشریح کرده است.

لوازم	مناسب مایکروویو		نظریات
فویل آلومینیوم	✗	✓	به مقدار خیلی کم برای جلوگیری از پخت بیش از حد در بعضی از نقاط غذا استفاده شود. اگر فویل آلومینیوم خیلی به دیوارها نزدیک باشد و یا آلومینیوم زیادی مصرف شده باشد، قوس الکتریکی در دستگاه ایجاد خواهد شد.
صفحه عایق		✓	بیش از ۸دقیقه گرمای اولیه ایجاد نکنید.
چینی و سفال		✓	چینی و سفال و سفال های لعابدار مناسب هستند، مگر آنکه دارای نوارهای فلزی باشد.
ظروف یکبار مصرف		✓	بعضی از غذاهای منجمد در این ظروف می‌باشند.
بسته بندی غذاهای آماده			
• ظروف پلی استرن		✓	برای گرم کردن غذا، اگر بیش از اندازه گرم شوند، ممکن است ذوب شوند.
• ظروف مقوائی		✗	یا ممکن است آتش بگیرند.
• مقواهای بازیافتی یا بطری های شیشه ای		✗	ممکن است قوس الکتریکی ایجاد کنند.
بلورجات			
• مخصوص فر یا میز غذا		✓	قابل استفاده هستند مگر آن که با نوار فلزی تزئین شده باشند.
• ظروف شیشه ای نازک		✓	برای گرم کردن غذا یا نوشیدنی. اگر یک مرتبه گرم شوند، ممکن است ترک برداشته شوند، فقط برای گرم کردن استفاده می‌شوند.
• بطری های شیشه ای		✓	ممکن است ایجاد آتش سوزی و یا قوس الکتریکی کنند.
فلز			
• سینی		✗	ممکن است ایجاد آتش سوزی و یاقوس الکتریکی کند.
• کیسه فریزر در بسته		✗	
کاغذ و مقوا			
• بشقاب، فنجان، دستمال آشپزخانه		✓	برای پخت های کوتاه مدت و گرم کردن و هم چنین برای جذب کردن رطوبت اضافی.
• مقوله های بازیافتی		✗	ممکن است باعث ایجاد قوس الکتریکی شوند.
پلاستیک			
• ظروف		✓	به خصوص اگر در مقابل گرما مقاومت داشته باشند. بعضی از پلاستیک ها در اثر حرارت تغییر شکل و یا تغییر رنگ می دهند. از ماشین استفاده نکنید. برای نگهداری رطوبت استفاده می شود.
• پوشش های چسبنده		✓	نباید با غذا تماس داشته باشند. هنگام برداشتن آنان مواظب باشید چون از زیر آنان بخار خارج می شود.
• کیسه های فریزر		✓✗	فقط در صورتیکه مورد تائید برای استفاده در فرباشند. نباید در بسته باشند. در صورت نیاز آنها را با چنگال سوراخ کنید.
مقواهای مومی یا ضد چرمی		✓	برای نگهداری رطوبت و جلوگیری از پخش شدن

✓ :پیشنهاد می شود
✓✗ :با احتیاط استفاده شود
✗ :غیر قابل اطمینان

راهنمای آشپزی

قطعات مشروحه زیر در مایکروویو شما باید مرتباً تمیز شوند تا از تجمع روغن و ذرات غذا بر روی دستگاه جلوگیری شود:

- ***سطوح داخلی و خارجی***
- ***درب و دزدگیرهای آن***
- ***حلقه و صفحه گردان***

☚ **همیشه** مطمئن شوید که درزگیر درب ها تمیز و به آسانی باز و بسته شوند.

☚ عدم نگهداری و نظافت مناسب دستگاه باعث خرابی سطوح داخلی شده و اثر مستقیم بر کارآئی دستگاه داشته و احتمالاً باعث صدمه دیدن دستگاه می‌شود.

۱. سطوح خارجی را با پارچه نرم، آب گرم و کف تمیز کنید. سپس آن را شسته و خشک نمایید.

۲. هر گونه مواد غذایی ریخته شده و یا لکه روی سطوح داخلی و یا صفحه گردان را با پارچه و کف تمیز کرده، شسته و سپس خشک نمائید.

۳. برای از بین بردن ذرات سخت و خشک شده غذا و از بین بردن بوها، یک فنجان آب لیمو رقیق شده را روی صفحه گردان قرار داده و با حداکثر توان به مدت ۱۰دقیقه آن را گرم کنید.

۴. در موقع لزوم قطعات قابل شستشو را در ماشین ظرفشویی بشوئید.

☚ آب داخل منافذ و شیارهای تهویه نریزید. هرگز از وسائل ساینده یا حلال های شیمیائی استفاده نکنید. دقت لازم را هنگام تمیز کردن نوار درب به کار ببرید تا مطمئن شوید هرگز مواد غذائی:

- روی آن ها انباشته نشود
- مانع بستن راحت و کامل درب نشود.

تعمیر و نگهداری فر مایکروویو

نکات و ملاحظات ساده زیر را هنگام نگهداری و سرویس مایکروویو مد نظر داشته باشید.

زمانی که درب و یا دزدگیر درب صدمه دیده است نباید از فر استفاده شود:

- ***لولا شکسته است***
- ***دزدگیرهای خراب است***
- ***قاب فر خراب یا فرورفته است***

فقط پرسنل متخصص و با تجربه باید تعمیر و سرویس مایکروویو را انجام دهند.

☚ **هرگز** قاب خارجی فر را برندارید. اگر دستگاه عیب داشته و نیاز به سرویس دارد و یا در ارتباط با مشکل آن شک دارید:

- آن را از پریز برق جدا کنید.
- با نزدیکترین نمایندگی خدمات پس از فروش تماس بگیرید.

✉ اگر می‌خواهید از دستگاه به طور موقت استفاده نکنید یک مکان خشک و بدون گرد و خاک را انتخاب نمائید.
علت: گرد و خاک و رطوبت بر کارکرد قطعات داخلی دستگاه اثر منفی می‌گذارند.

✉ این فر مایکروویو برای فعالیتهای تجاری مناسب نیست.

مشخصات فنی

سامسونگ همواره در تلاش است تا کیفیت محصولات خود را بهبود ببخشد.
بنابراین مشخصات و دستورالعمل های ارائه شده مربوط به این دستگاه ممکن است بدون اعلام قبلی تغییر کند.

مدل	MW2350G
منبع برق	۵۰هرتز ~ ۲۳۰ ولت
مصرف برق مایکروویو	 ۱۲۵۰ وات
توان خروجی	۱۰۰۰ وات/۸۵۰ وات [IEC-705]
فرکانس کارکرد	۲۴۵۰مگاهرتز
مگنترون	OM75P (31)
روش خنک سازی	پنکه خنک کننده
ابعاد(طول×عرض×ارتفاع) سطح خارجی دستگاه داخل دستگاه	 ۴۸۹×۲۷۵×۳۶۸ میلی متر ۳۳۰×۲۱۱×۳۲۹ میلی متر
حجم	۲۳ لیتر
وزن خالص	 تقریباً ۱۳/۵کیلوگرم

یادداشت

در صورت داشتن هر گونه سوال یا پیشنهاد درباره محصولات سامسونگ لطفاً با مرکز خدمات مشتریان سامسونگ تماس بگیرید.

M2350G_EN-03605J_HAC.fm Page 1 Thursday, March 19, 2009 6:03 PM

SAMSUNG

MICROWAVE OVEN

Owner's Instructions

MW2350G

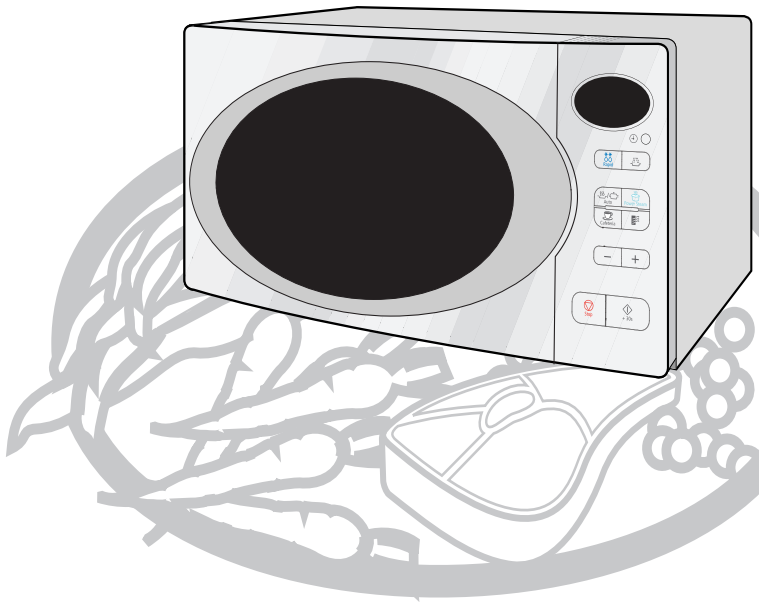

Oven 2
Accessories 2
Control Panel 2
Using this Instruction Booklet 3
Safety Precautions 3
Installing Your Microwave Oven 4
Setting the Time 5
What to Do if You are in Doubt or Have a Problem 5
Cooking / Reheating 6
Power Levels 6
Stopping the Cooking 6
Adjusting the Cooking Time 6
Using the Auto Reheat/Cook Feature 7
Auto Reheat/Cook Settings 7
Using the Cafeteria Feature 8
Cafeteria Settings 8
Using the Auto Rapid Defrost Feature 9
Auto Rapid Defrost Settings 9
Using the Power Steam Function 10
Using the Deodorization Feature 11
Switching the Beeper Off 11
Cookware Guide 12
Cleaning Your Microwave Oven 13
Storing and Repairing Your Microwave Oven 13
Technical Specifications 14

Planet First 100% Recycled Paper

This manual is made with 100% recycled paper.

Code No. : DE68-03605J-01

배태현taehyun.baeMWO기***(웹키친솔루션)*********197 20090319180341

EN

Oven

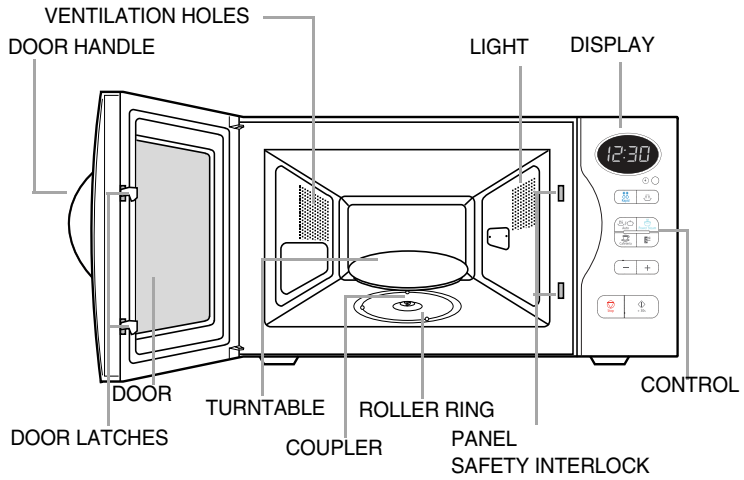

Accessories

Depending on the model that you have purchased, you are supplied with several accessories that can be used in a variety of ways.



1. **Coupler**, already placed over the motor shaft in the base of the oven.
   Purpose : The coupler rotates the turntable.



2. **Roller ring**, to be placed in the centre of the oven.
   Purpose : The roller ring supports the turntable.



3. **Turntable**, to be placed on the roller ring with the centre fitting to the coupler.
   Purpose : The turntable serves as the main cooking surface; it can be easily removed for cleaning.



4. **Power steam cooker**, see page 10.
   Purpose : Use the plastic steam cooker when using power steam function.

☛ **DO NOT** operate the microwave oven without the roller ring and turntable.

Control Panel

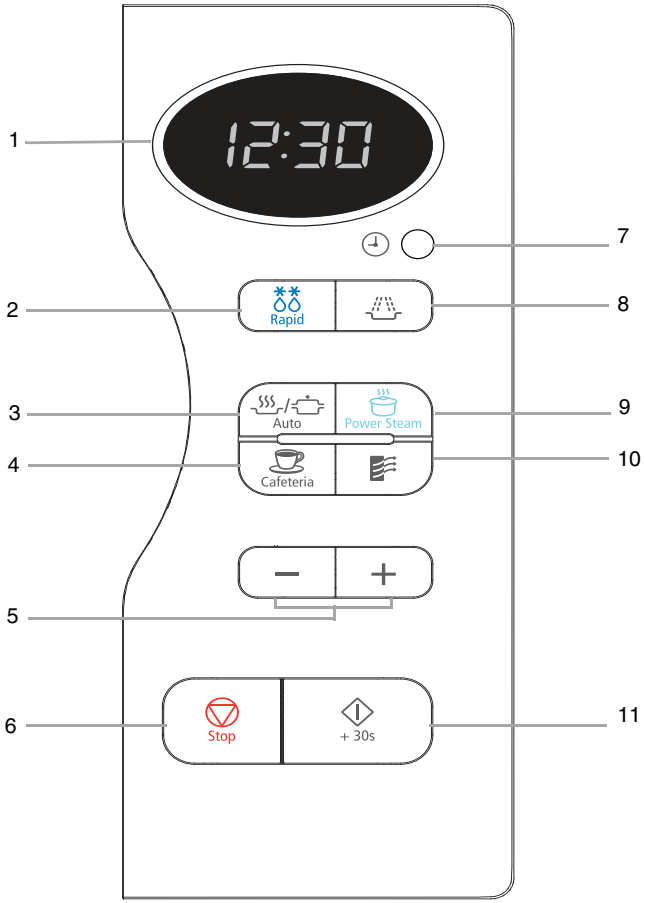

1. DISPLAY
2. AUTO RAPID DEFROST FEATURE
3. AUTO REHEAT/COOK SELECTION
4. CAFETERIA SELECTION
5. UP (+) / DOWN (—) BUTTON (Cook time, Weight and serving size)
6. STOP/CANCEL BUTTON
7. CLOCK SETTING
8. POWER LEVEL SETTING
9. POWER STEAM SELECTION
10. DEODORIZATION BUTTON
11. START BUTTON

배태현taehyun.baeMWO가 ***(휴대키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 3 Thursday, March 19, 2009 6:03 PM

Using this Instruction Booklet

You have just purchased a SAMSUNG microwave oven. Your Owner's Instructions contain much valuable information on cooking with your microwave oven:

- ***Safety precautions***
- ***Suitable accessories and cookware***
- ***Useful cooking tips***

At the front of the booklet you will find illustrations of the oven, and more importantly the control panel, so that you can find the buttons more easily.

The step-by-step procedures use two different symbols.

Important

Note

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

Failure to observe the following safety precautions may result in harmful exposure to microwave energy.

(a) Under no circumstances should any attempt be made to operate the oven with the door open or to tamper with the safety interlocks (door latches) or to insert anything into the safety interlock holes.

(b) Do not place any object between the oven door and front face or allow food or cleaner residues to accumulate on sealing surfaces. Ensure that the door and door sealing surfaces are kept clean by wiping after use first with a damp cloth and then with a soft dry cloth.

(c) Do not operate the oven if it is damaged until it has been repaired by a qualified microwave service technician trained by the manufacturer. It is particularly important that the oven door closes properly and that there is no damage to the:
(1) Door (bent)
(2) Door hinges (broken or loose)
(3) door seals and sealing surfaces

(d) The oven should not be adjusted or repaired by anyone other than a properly qualified microwave service technician trained by the manufacturer.

Safety Precautions

EN

IMPORTANT SAFETY INSTRUCTIONS.
READ CAREFULLY AND KEEP FOR FUTURE REFERENCE.

Before cooking food or liquids in your microwave oven, please check that the following safety precautions are taken.

- Only use utensils that are suitable for use in microwave ovens;
  DO NOT use any metallic containers, Dinnerware with gold or silver trimmings, Skewers, forks, etc.
  Remove wire twist ties from paper or plastic bags.

Reason: Electric arcing or sparking may occur and may damage the oven.

- When heating food in plastic or paper containers, keep an eye on the oven due to the possibility of ignition;
  Do not use your microwave oven to dry papers or clothes.
- Small amounts of food require shorter cooking or heating time.
  If normal times are allowed they may overheat and burn.
- If smoke is observed, switch off or unplug the appliance and keep the door closed in order to stifle any flames;
- Microwave heating of beverages can result in delayed eruptive boiling, therefore care must be taken when handling the container; To prevent this situation
  ALWAYS allow a standing time of at least 20 seconds after the oven has been switched off so that the temperature can equalize.
  Stir during heating, if necessary, and ALWAYS stir after heating.
  In the event of scalding, follow these FIRST AID instructions:
  * Immerse the scalded area in cold water for at least 10 minutes.
  * Cover with a clean, dry dressing.
  * Do not apply any creams, oils or lotions.
- **NEVER** fill the container to the top and choose a container that is wider at the top than at the bottom to prevent the liquid from boiling over. Bottles with narrow necks may also explode if overheated.
  NEVER heat a babys bottle with the teat on, as the bottle may explode if overheated.
- The contents of feeding bottles and baby food jars shall be stirred or shaken and the temperature checked before consumption, in order to avoid burns;
- Eggs in their shell and whole hard-boiled eggs should not be heated in microwave ovens since they may explode, even after microwave heating has ended;
  Also do not heat airtight or vacuum-sealed bottles, jars, containers, nuts in shells, tomatoes etc.
- The oven should be cleaned regularly and any food deposits removed;
- Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the life of the appliance and possibly result in a hazardous situation;
- **DO NOT** cover the ventilation slots with cloths or paper. They may catch fire as hot air is evacuated from the oven.
  The oven may overheat and automatically switch itself off. It will remain inoperable until it has cooled sufficiently.
- **ALWAYS** use oven gloves when removing a dish from the oven to avoid unintentional burn.

배태현taehyun.baeMWO기***(엠키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 4 Thursday, March 19, 2009 6:03 PM

EN

Safety Precautions (continued)

- **DO NOT** touch heating elements or interior oven walls until the oven be cooled down.
- Do not immerse the power cable or plug in water and keep the power cable away from heated surfaces.
  Do not operate this appliance if it has a damaged power cable or plug.
- Stand at arms length from the oven when opening the door.

Reason: The hot air or steam released may cause scalding.

- You may notice a Clicking sound during operation(especially when the oven is defrosting).

Reason: This sound is normal when the electrical power output is changing.

- **DO NOT** operate the microwave oven when it is empty. The power will be cut off automatically for safety. You can operate normally after letting it stand for over 30 minutes.
  It is best to leave a glass of water inside the oven at all times.The water will absorb the microwaves energy if the oven accidently started.
- The microwave oven shall not be placed in a cabinet.

IMPORTANT

- Young children should **NEVER** be allowed to use or play with the microwave oven. Nor should they be left unattended near the microwave oven when it is in use. Items of interest to children should not be stored or hidden just above the oven.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.

WARNING:
If the door or door seals are damaged, the oven must not be operated until it has been repaired by a competent person.

WARNING:
It is hazardous for anyone other than a comperent person to carry out any service or repair operation which involves the removal of a cover which gives protection against exposure to microwave energy.

WARNING:
Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING:
Only allow children to use the oven without supervision when adequate instructions have been given so that the child is able to use the oven in a safe way and understands the hazards of improper use.

Installing Your Microwave Oven

Place the oven on a flat level surface 85cm above the floor. The surface should be strong enough to safety bear the weight of the oven.





1. When you install your oven, make sure there is adequate ventilation for your oven by leaving at least 10 cm (4 inches) of space behind and, on the sides of the oven and 20 cm (8 inches) of space above.
2. Remove all packing materials inside the oven.
   Install the roller ring and turntable.
   Check that the turntable rotates freely.
3. This microwave oven has to be positioned so that plug is accessible.

☛ If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
For your personal safety, plug the cable into a 3-pin, 230 Volt, 50Hz, AC earthed socket. If the power cable of this appliance is damaged, it must be replaced by a special cable.

☛ Do not install the microwave oven in hot or damp surroundings like next to a traditional oven or radiator. The power supply specifications of the oven must be respected and any extension cable used must be of the same standard as the power cable supplied with the oven. Wipe the interior and the door seal with a damp cloth before using your microwave oven for the first time.

배태현taehyun.baeMWO기***(엠키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 5 Thursday, March 19, 2009 6:03 PM

Setting the Time

Your microwave oven has an inbuilt clock. The time can be displayed in either the 24-hour or 12-hour notation. You must set the clock:

- ***When you first install your microwave oven***
- ***After a power failure***

✉ Do not forget to reset the clock when you switch to and from summer or winter time.



1. **To display the time in the...** / **Then press the ⏲ button...**
   24-hour notation — Once
   12-hour notation — Twice



2. Press the (—) and (+) buttons to set the hour.



3. Press the ⏲ button.



4. Press the (—) and (+) buttons to set the minute.



5. Press the ⏲ button.

What to Do if You are in Doubt or Have a Problem

If you have any of the problems listed below try the solutions given.

◆ This is normal.
- Condensation inside the oven.
- Air flow around the door and outer casing.
- Light reflection around the door and outer casing.
- Steam escaping from around the door or vents.

◆ The oven does not start when you press the ⏀ button.
- Is the door completely closed?

◆ The food is not cooked at all
- Have you set the timer correctly and/or pressed the ⏀ button?
- Is the door closed?
- Have you overloaded the electric circuit and caused a fuse to blow or a breaker to be triggered?

◆ The food is either overcooked or undercooked
- Was the appropriate cooking length set for the type of food?
- Was an appropriate power level chosen?

◆ Sparking and cracking occur inside the oven (arcing)
- Have you used a dish with metal trimmings?
- Have you left a fork or other metal utensil inside the oven?
- Is aluminium foil too close to the inside walls?

◆ The oven causes interference with radios or televisions
- Slight interference may be observed on televisions or radios when the oven is operating. This is normal.To solve this problem, install the oven away from televisions, radios and aerials.
- If interference is detected by the oven's microprocessor, the display may be reset.To solve this problem, disconnect the power plug and reconnect it. Reset the time.

✉ If the above guidelines do not enable you to solve the problem, contact your local dealer or SAMSUNG after-sales service.

EN

배태현taehyun.baeMWO기술팀(키친솔루션)*********197 20090319180341

EN

Cooking / Reheating

The following procedure explains how to cook or reheat food.

ALWAYS check your cooking settings before leaving the oven unattended.

First, place the food in the centre of the turntable. Then, close the door.



1. Press the button.
Result : The 850W (maximum cooking power) indications are displayed:
Select the appropriate power level by pressing the button again until the corresponding wattage is displayed. Refer to the power level table.



2. Set the cooking time by Pressing the (—) and (+) buttons as required.



3. Press the button.
Result : The oven light comes on and the turntable starts rotating.
Cooking starts and when it has finished the oven beeps four times.

☛ **Never** switch the microwave oven on when it is empty.

✉ If you wish to heat a dish for a short period of time at maximum power(850W), simply press the **+30s** button once for each 30 seconds of cooking time. The oven starts immediately.

Power Levels

You can choose from among the power levels below.

Power Level	Output
HIGH	850 W
MEDIUM HIGH	600 W
MEDIUM	450 W
MEDIUM LOW	300 W
DEFROST	180 W
LOW / KEEP WARM	100 W

✉ If you select the higher power level, the cooking time must be decreased.

✉ If you select the lower power level, the cooking time must be increased.

Stopping the Cooking

You can stop cooking at any time to check the food.



1. To stop temporarily;
Open the door.
Result : Cooking stops. To resume cooking, close the door and press again.



2. To stop Completely:
Press the **Stop** ( ) button.
Result : The cooking stops.
If you wish to cancel the cooking setting, press the **Stop** ( ) button again.

☛ You can cancel any setting before you start cooking by simply pressing **Stop** ( ).

Adjusting the Cooking Time

You can increase the cooking time by pressing the +30s button once for each 30 seconds to be added.



Press the button once for each 30 seconds to be added.

배태현taehyun.baeMWO기***(품질키천출용선)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 7 Thursday, March 19, 2009 6:03 PM

Using the Auto Reheat/Cook Feature

The Auto Reheat/Cook feature has five pre-programmed cooking times. You do not need to set either the cooking times or the power level. You can adjust the number of servings by pressing the (—) and (+) buttons. First, place the food in the centre of the turntable and close the door.



1. Select the type of food that you are cooking by pressing the **Auto Reheat/Cook**( ) button once or more times.



2. Select the size of the serving by pressing the (—) and (+) buttons. (Refer to the table on the side.)



3. Press the button.
   Result : Cooking starts. When it has finished:
   1) The oven beeps four times.
   2) The end reminder signal will beep 3 times (once every minutes)
   3) The current time is displayed again.

✉ Use only recipients that are microwave-safe.

Auto Reheat/Cook Settings

The following table presents the various Auto Reheat/Cook( ) Programmes, quantities, standing times and appropriate recommendations.

Code / Food	Serving Size	Standing Time	Recommendations
1. **Ready Meals** (chilled)	300-350 g 400-450 g	3 min.	Put on a ceramic plate and cover with microwave cling film. This programme is suitable for meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).
2. **Frozen Ready Meals**	300 - 350 g 400 - 450 g	4 min.	Take frozen ready meal and check if dish is suitable for microwave. Pierce film of ready meal. Put the frozen ready meal in the centre. This programme is suitable for frozen ready meals consisting of 3 components (e.g. meat with sauce, vegetables and a side dish like potatoes, rice or pasta).
3. **Jacket Potatoes**	200 g 400 g 600 g	3 min.	Take potatoes with similar size and weight of circa 200g per potato. Wash and prick the skin with a fork. Wrap each potato in microwave cling film. Put one potato in the centre, put two potatoes opposite to each other and 3 potatoes in a circle directly on the turntable.
4. **Fresh Vegetables**	100 - 150 g 200 - 250 g 300 - 350 g 400 - 450 g 500 - 550 g	3 min.	Weigh the vegetables after washing, cleaning and cutting into similar size. Put them into a glass bowl with lid. Add 30 ml (2 tablespoons) water when cooking 100-250 g, add 45 ml (3-4 tablespoons) for 300-550 g. Stir after cooking.
5. **Frozen Vegetables**	100 - 150 g 200 - 250 g 300 - 350 g 400 - 450 g 500 - 550 g	3-4 min.	Weigh the frozen vegetables (-18°C) and put them in a suitable sized glass pyrex bowl with lid. When cooking 100-350 g add 15 ml (1 tablespoon) water, for 400-550 g add 30 ml (2 tablespoons). Stir after cooking and before serving. This programme is suitable for peas, sweet corn, broccoli, cauliflower and mixed vegetables such as peas, carrots and cauliflower.

EN

배태현taehyun.baeMWO기***(웹키친솔루션)*********197 20090319180341

EN

Using the Cafeteria Feature

With the Cafeteria feature, the cooking time is set automatically.

You can adjust the number of servings by pressing the (−) and (+) buttons.

First, place the food in the centre of the turntable and close the door.

1. Select the type of food that you are cooking by pressing the **Cafeteria**( ) button once or more times.



2. Select the size of the serving by pressing the (−) and (+) buttons. (Refer to the table.)



3. Press the button.
Result : Cooking starts. When it has finished:
1) The oven beeps four times.
2) The end reminder signal will beep 3 times (once every minutes)
3) The current time is displayed again.

✉ Use only recipients that are microwave-safe.

Cafeteria Settings

The following table presents Auto Programmes for reheating drinks and defrosting frozen cake.

It contains its quantities, standing times and appropriate recommendations.

Code / Food	Serving Size	Standing Time	Recommendations
1. **Drinks** Coffee, milk, tea, water (room-temperature)	150 ml (1 cup) 250 ml (1 mug)	1-2 min.	Pour into a ceramic cup (150 ml) or mug (250 ml) and place in the centre of turntable. Reheat uncovered. Stir carefully before and after standing time. Be careful while taking the cups out (see safety instructions for liquids).
2. **Frozen Cake**	100 g (1pc) 200 g (2pcs) 300 g (2-3pcs) 400 g (3-4pcs) 500 g (4pcs)	5-15 min.	Put flat frozen cake pieces (-18°C) directly on metal rack. Put bigger pieces and muffins on turntable. Put one piece in the centre, put 2 pieces opposite to each other and 3-4 cake pieces in a circle. By the help of the heater the cake will be warmed and crisp up. This programme is suitable for cake pieces such as apple cake with crumble topping, streusel cake, cake with poppy seeds and muffins. It is not suitable for a whole cake, cake with cream filling and cake with chocolate topping.

배태현taehyun.baeMWO기****(품티키천출장션)*********197 20090319180341

Using the Auto Rapid Defrost Feature

The Auto Rapid Defrost feature enables you to defrost meat, poultry, fish and bread/cake. The defrost time and power level are set automatically.

You simply select the programme and the weight.

✉ Use only dishes that are microwave-safe.

First, place the frozen food in the centre of the turntable and close the door.



1. Select the type of food that you are cooking by pressing the **Rapid** (⁂) button one or more times.
(Refer to the table on the opposite page for further details)

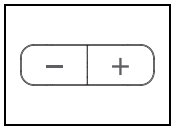

2. Select the food weight by pressing the (−) and (+) buttons.
It is possible to set up to a maximum of 1500g



3. Press the ⏀ button.
Result : Cooking starts. When it has finished.
1) The oven beeps four times.
2) The end reminder signal will beep 3 times (once every minute).
3) The current time is displayed again.

✉ You can also defrost food manually. To do so, select the microwave cooking/reheating function with a power level of 180W. Refer to the section entitled " Cooking/Reheating" on page 6 for further details.Auto Rapid Defrost Settings

Auto Rapid Defrost Settings

The following table presents the various Rapid Defrost programmes, quantities, standing times and appropriate recommendations. Remove all kind of package material before defrosting.

Place meat, poultry and fish on a flat glass plate or on a ceramic plate, arrange bread and cake on kitchen paper.

Code / Food	Serving Size	Standing Time	Recommendations
1. Meat	200 - 1500 g	20-90 min.	Shield the edges with aluminium foil. Turn the meat over, when the oven beeps. This programme is suitable for beef, lamb, pork, steaks, chops, minced meat.
2. Poultry	200 - 1500 g	20-90 min.	Shield the leg and wing tips with aluminium foil. Turn the poultry over, when the oven beeps. This programme is suitable for whole chicken as well as for chicken portions.
3. Fish	200 - 1500 g	20-80 min.	Shield the tail of a whole fish with aluminium foil. Turn the fish over, when the oven beeps. This programme is suitable for whole fishes as well as for fish fillets.
4. Bread	125 - 625 g	10-60 min.	Put bread horizontally on a piece of kitchen paper and turn over, as soon as the oven beeps. Place cake on a ceramic plate and if possible, turn over, as soon as the oven beeps. (Oven keeps operating and is stopped, when you open the door.) This programme is suitable for all kinds of bread, sliced or whole, as well as for bread rolls and baguettes. Arrange bread rolls in a circle.

EN

배태현taehyun.baeMWO기****(휴대키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 10 Thursday, March 19, 2009 6:03 PM

Using the Power Steam Function

EN

With the power steam feature, the cooking time is set automatically.

You can adjust the number of servings by pressing the (−) and (+) buttons.

Use the plastic steam cooker when using power steam function.

First, place the plastic steam cooker in the centre of the turntable and close the door.



1. Select the type of food that you are cooking by pressing the **Power Steam** ( )button once or more times.



2. Select the size of the serving by pressing the (−) and (+) buttons.
(Refer to the table on the side page.)



3. Press the button.
Result : Cooking starts. When it has finished:
   1) The oven beeps four times.
   2) The end reminder signal will beep 3 times (once every minute)
   3) The current time is displayed again.

Use only recipients that are microwave-safe.

Power steam cooking hint

Components of Power Steam Cooker

Bowl

Insert tray


Lid

Handling of Power Steam Cooker

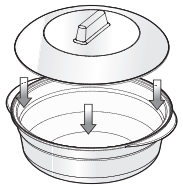
(Bowl + lid)

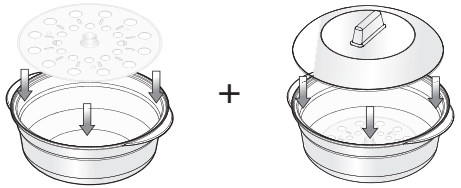
(Bowl with insert tray+ lid)

The following table presents the 4 Auto Programs of the Power Steam function, quantities, standing times and appropriate recommendations. Use the power steam cooker when using power steam function.

Code / Food	Serving Size	Standing Time	Handling	Recommendations
1. White Rice	150-200 g 250-300 g	4-5 min.	Bowl + lid	Use parboiled white rice. Put rice into the steam cooker. Add double quantity of cold water. Cover with lid. After cooking, stir before standing time. After cooking remove moisture in the cavity by using kitchen paper.
2. Peeled Potatoes	100-150 g 200-250 g 300-350 g 400-450 g 500-550 g	2-3 min.	Bowl + lid	Weigh the potatoes after peeling, washing and cutting into similar size. Put them into the steam cooker. Add 15-30 ml (1-2 tablespoons) water when steaming 100-350g, add 45-60 ml (3-4 tablespoons) for 400-550 g. Cover with lid.
3. Fresh Vegetables	100-150 g 200-250 g 300-350 g 400-450 g	1-2 min.	Bowl with insert tray+ lid	Weigh the vegetables after washing, cleaning and cutting into similar size. Put tray into the bowl of steam cooker. Distribute vegetables on the tray. Add 30 ml (2 tablespoons) water, when steaming 100-350 g, add 45 ml (3 tablespoons) for 400-450 g. Cover with lid.
4. Fruit Compote	100-150 g 200-250 g 300-350 g 400-450 g	2-3 min.	Bowl + lid	Weigh the fresh fruits after peeling and washing and cut into similar slices or cubes. Put into steam cooker. When steaming 100-350g fruits add 15-30 ml (1-2 tbsp.) water, for 400-450 g add 45ml (3 tbsp.). Additionally add 1-2 tbsp. sugar. Cover with lid. After steaming stir carefully. This programme is suitable for apples, pears, plums, apricots, mangoes or pineapple.

배태현taehyun.baeMWO기***(품기전출원)*********197 20090319180341

Using the Deodorization Feature

Use this feature after cooking odorous food or when there is a lot of smoke in the oven interior.

First clean the oven interior.

Press the **Deodorization**( ) button after you have finished cleaning. you will hear four beeps.

- The deodorization time has been specified as 5 minutes. It increases by 30 seconds whenever the **+30s** button is pressed.
- The maximum deodorization time is 15 minutes.

Switching the Beeper Off

You can switch the beeper off whenever you want.



1. Press the **Stop** ( ) and **Start** ( ) buttons at the same time.
   Result :
   - The following indication is displayed.

   - The oven will not beep each time you press a button.



2. To switch the beeper back on, press the **Stop** ( ) and **Start** ( ) buttons again at the same time.
   Result :
   - The following indication is displayed.

   - The oven operates with the beeper on again.

EN

배태현taehyun.baeMWO기***(웹키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 12 Thursday, March 19, 2009 6:03 PM

Cookware Guide

EN

To cook food in the microwave oven, the microwaves must be able to penetrate the food, without being reflected or absorbed by the dish used.

Care must therefore be taken when choosing the cookware. If the cookware is marked microwave-safe, you do not need to worry.

The following table lists various types of cookware and indicates whether and how they should be used in a microwave oven.

Cookware	Microwave-Safe	Comments
Aluminium foil	✓✗	Can be used in small quantities to protect areas against overcooking. Arcing can occur if the foil is too close to the oven wall or if too much foil is used.
Browning plate	✓	Do not preheat for more than eight minutes.
China and earthenware	✓	Porcelain, pottery, glazed earthenware and bone china are usually suitable, unless decorated with a metal trim.
Disposable polyester cardboard dishes	✓	Some frozen foods are packaged in these dishes.
Fast-food packaging		
• Polystyrene cups containers	✓	Can be used to warm food. Overheating may cause the polystyrene to melt.
• Paper bags or papers	✗	May catch fire.
• Recycled paper or metal trims	✗	May cause arcing.
Glassware		
• Oven-to-table ware	✓	Can be used, unless decorated with a metal trim.
• Fine glassware	✓	Can be used to warm foods or liquids. Delicate glass may break or crack if heated suddenly.
• Glass jars	✓	Must remove the lid. Suitable for warming only.
Metal		
• Dishes	✗	May cause arcing or fire.
• Freezer bag twist ties	✗	
Paper		
• Plates, cups, napkins and Kitchen paper	✓	For short cooking times and warming. Also to absorb excess moisture.
• Recycled paper	✗	May cause arcing.
Plastic		
• Containers	✓	Particularly if heat-resistant thermoplastic. Some other plastics may warp or discolour at high temperatures. Do not use Melamine plastic.
• Cling film	✓	Can be used to retain moisture. Should not touch the food. Take care when removing the film as hot steam will escape.
• Freezer bags	✓✗	Only if boilable or oven-proof. Should not be airtight. Prick with a fork, if necessary.
Wax or grease-proof paper	✓	Can be used to retain moisture and prevent spattering.

✓ :Recommended
✓✗:Use Caution
✗ :Unsafe

배태현taehyun.baeMWO기***(휴대키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 13 Thursday, March 19, 2009 6:03 PM

Cleaning Your Microwave Oven

The following parts of your microwave oven should be cleaned regularly to prevent grease and food particles from building up:

- ***Inside and outside surfaces***
- ***Door and door seals***
- ***Turntable and Roller rings***

☛ **ALWAYS** ensure that the door seals are clean and the door closes properly.

☛ Failure to maintain the oven in a clean condition could lead to deterioration of the surface that could adversely affect the of the appliance and possibly result in a hazardous situation.

1. Clean the outside surfaces with a soft cloth and warm, soapy water. Rinse and dry.

2. Remove any splashes or stains on the inside surfaces or on the roller ring with a soapy cloth. Rinse and dry.

3. To loosen hardened food particles and remove smells, place a cup of diluted lemon juice on the turntable and heat for ten minutes at maximum power.

4. Wash the dishwasher-safe plate whenever necessary.

☛ **DO NOT** spill water in the vents. NEVER use any abrasive products or chemical solvents.Take particular care when cleaning the door seals to ensure that no particles:
- Accumulate
- Prevent the door from closing correctly

Storing and Repairing Your Microwave Oven

EN

A few simple precautions should be taken when storing or having your microwave oven serviced.

The oven must not be used if the door or door seals are damaged:

- ***Broken hinge***
- ***Deteriorated seals***
- ***Distorted or bent oven casing***

Only a qualified microwave service technician should perform repair

☛ **NEVER** remove the outer casing from the oven. If the oven is faulty and needs servicing or you are in doubt about its condition:
- Unplug it from the wall socket
- Contact the nearest after-sales service centre

✉ If you wish to store your oven away temporarily, choose a dry, dust-free place.

Reason: Dust and damp may adversely affect the working parts in the oven.

✉ This microwave oven is not intended for commercial use.

배태현taehyun.baeMWO기획(홈키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 14 Thursday, March 19, 2009 6:03 PM

EN

Technical Specifications

SAMSUNG strives to improve its products at all times. Both the design specifications and these user instructions are thus subject to change without notice.

Model	**MW2350G**
Power source	230V ~ 50 Hz
Power consumption Microwave	 1250 W
Output power	100 W / 850 W (IEC-705)
Operating frequency	2450 MHz
Magnetron	OM75P(31)
Cooling method	Cooling fan motor
Dimensions (W x H x D) Outside Oven cavity	 489 x 275 x 383 mm 330 x 211 x 329 mm
Volume	23 liter
Weight Net	 13.5 kg approx

Note

배태현taehyun.baeMWO기****(휴대키친솔루션)*********197 20090319180341

M2350G_EN-03605J_HAC.fm Page 15 Thursday, March 19, 2009 6:03 PM

Note

배태현taehyun.baeMWO기****(웹키친솔루션)*********197 20090319180341

SAMSUNG

QUESTIONS OR COMMENTS

COUNTRY	CALL	OR VISIT US ONLINE AT
BAHRAIN	8000-4726	www.samsung.com
Egypt	08000-726786	
JORDAN	800-22273	
Morocco	080 100 2255	
Oman	800-SAMSUNG (726-7864)	
Saudi Arabia	9200-21230	
Turkey	444 77 11	
U.A.E	800-SAMSUNG (726-7864)	

배태현taehyun.baeMWO기***(키친솔루션)*********197 20090319180341